




Walk-in Corner Larder

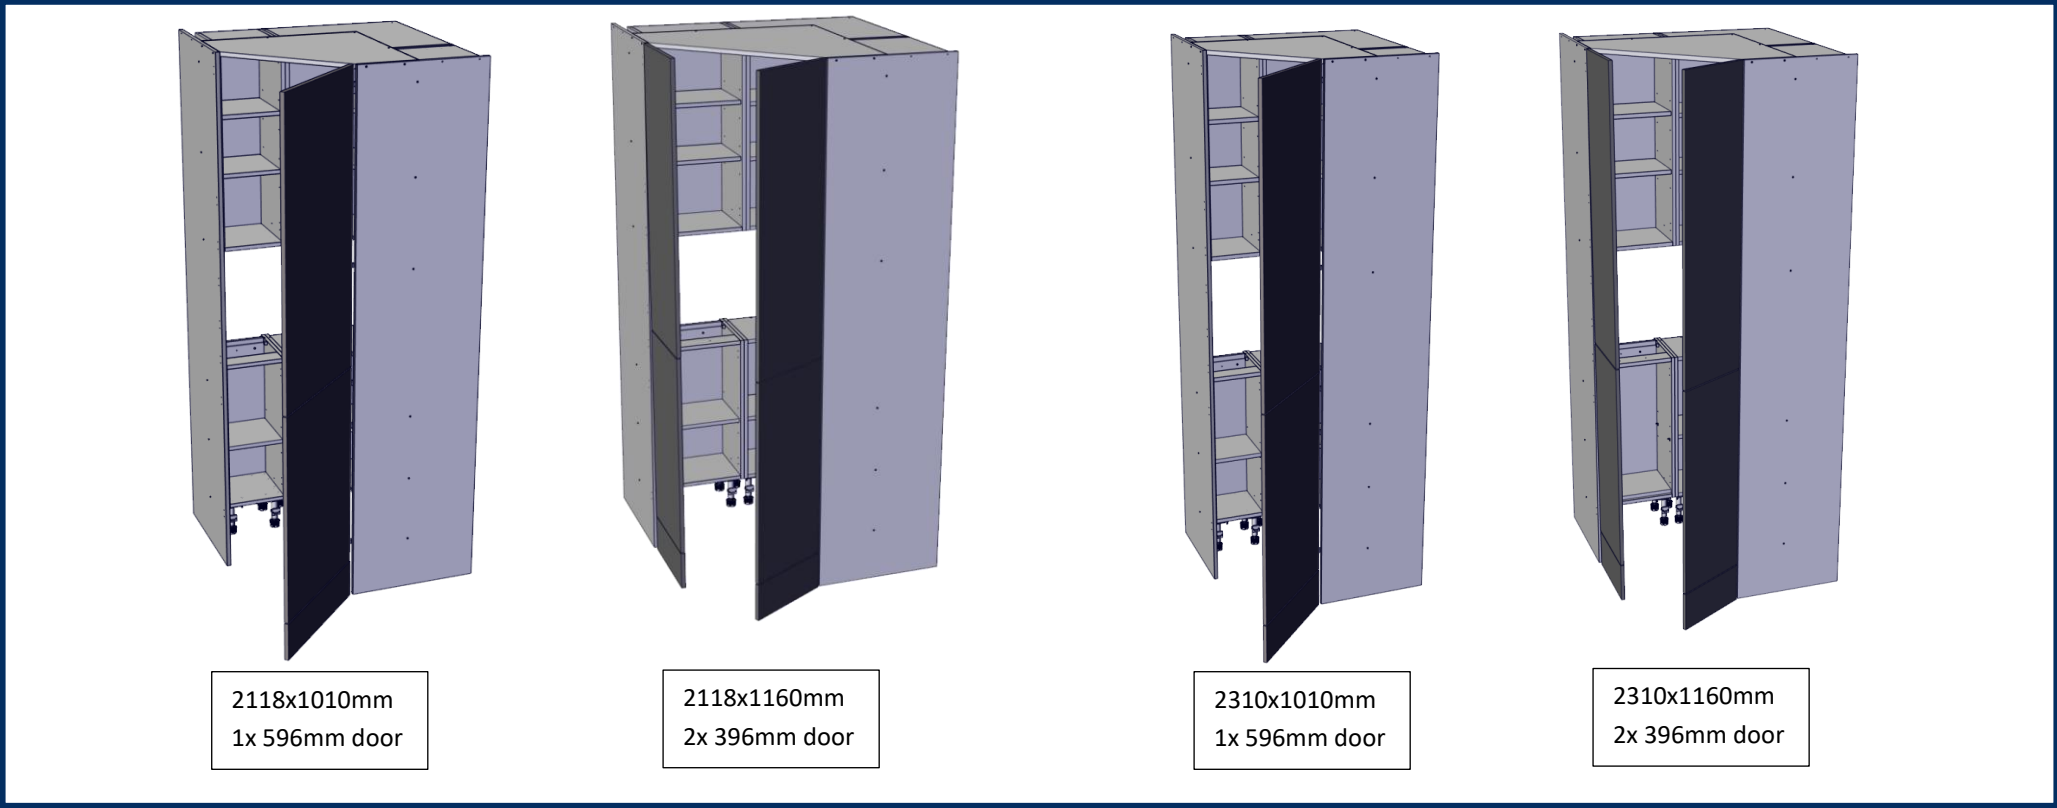



Please read these instructions carefully before proceeding.

This instruction is used in conjunction with the Installation Guide.


Important: Installation shall be carried out exactly according to the manufacturer’s instructions otherwise a safety risk can occur if incorrectly installed.

Warning: To prevent cabinets overturning or falling, they must be used with the wall attachment device(s) provided. Before fixing any cabinets to the wall, ensure the wall construction can take the weight of the loaded cabinet and the appropriate fixings are used. If in doubt, consult an expert.


Note: Wall fixing screws are not supplied due to different wall types requiring different fixings.

Caution: Some small pieces of hardware could be hazardous to small children. Keep all items out of reach and do not leave children unattended in the assembly area.



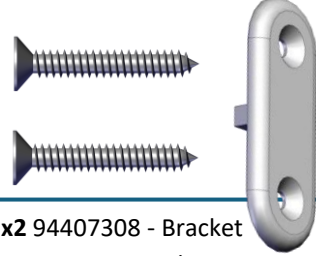


x2 94407308 - Bracket
x4 94356602 – Ø3.5x15 CSK

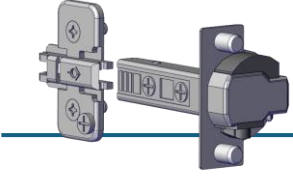


x5 / x10 43510307 – Anthracite
x5 / x10 21313704 - Nickel



x20 94356811 – Ø4x45 CSK

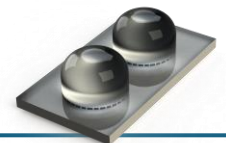


x1 94405709 – Per Door

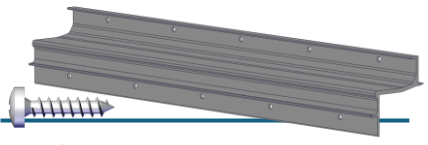


x1 / x2 60205609 – Bracket
x10 / x20 61331500 - 3.5 x 12 RHD


1 Install Cabinets

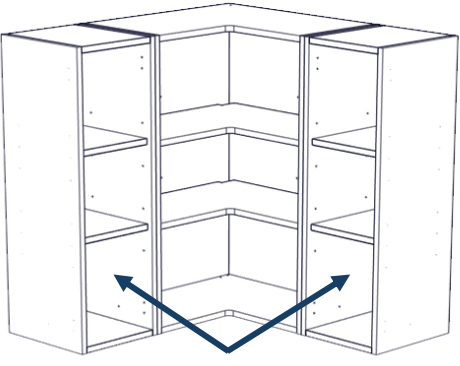


1x 596mm door = W30 cabinets

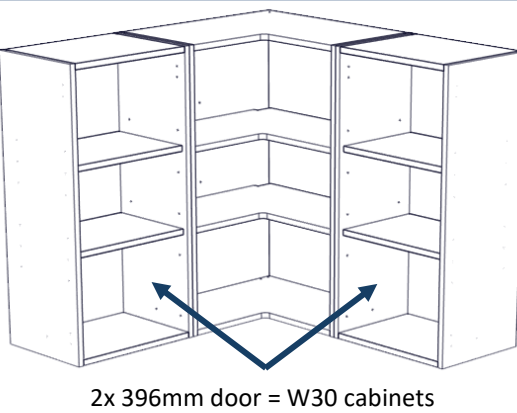

2x 396mm door = W30 cabinets

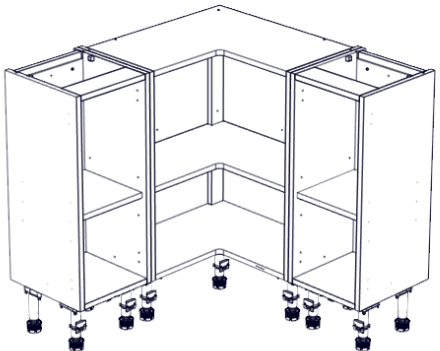



1x 596mm door = W30 cabinets

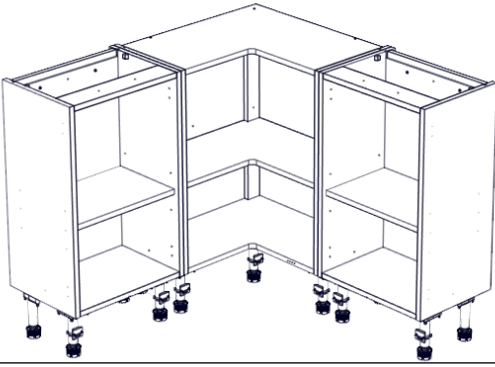


2x 396mm door = W30 cabinets

Note: Install cabinets as denoted on the plan and according to their specific installation guide.


2 Install Fillers

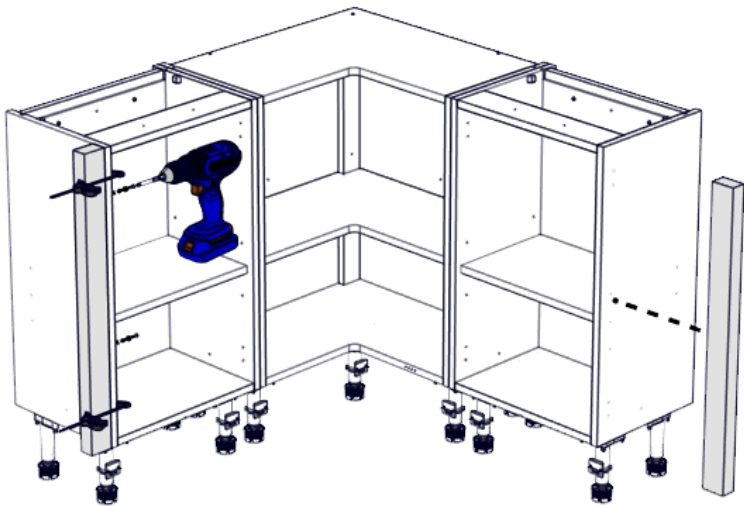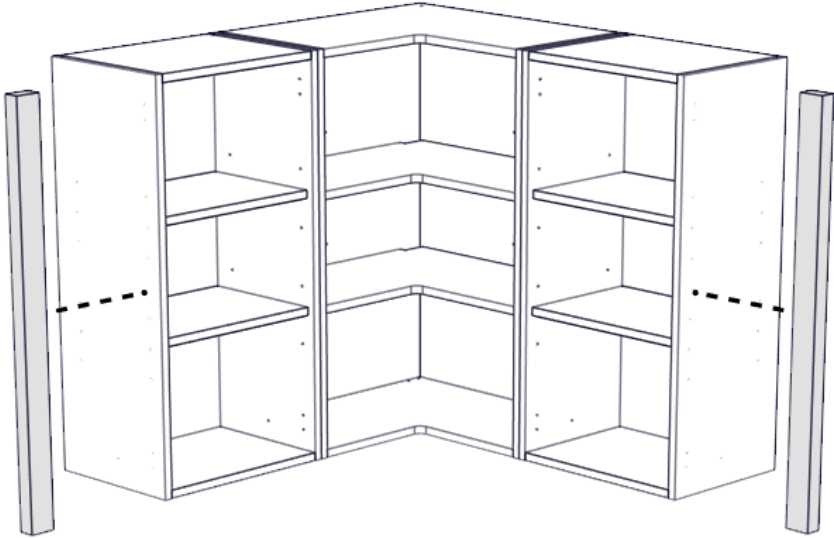



Note: For 2310 cabinets, the filler does not need cutting for the wall units.

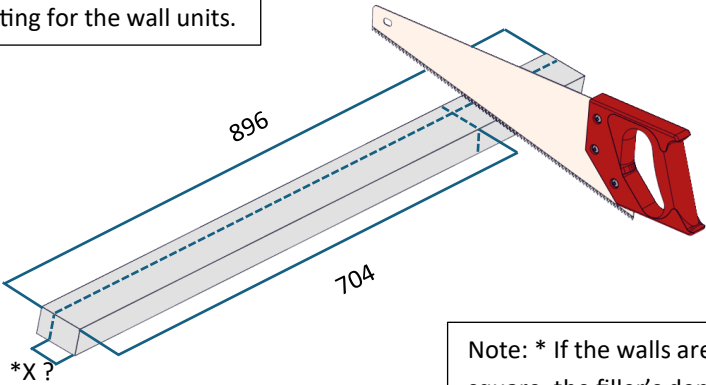



Note: * If the walls aren't square, the filler's depth may need to be cut.

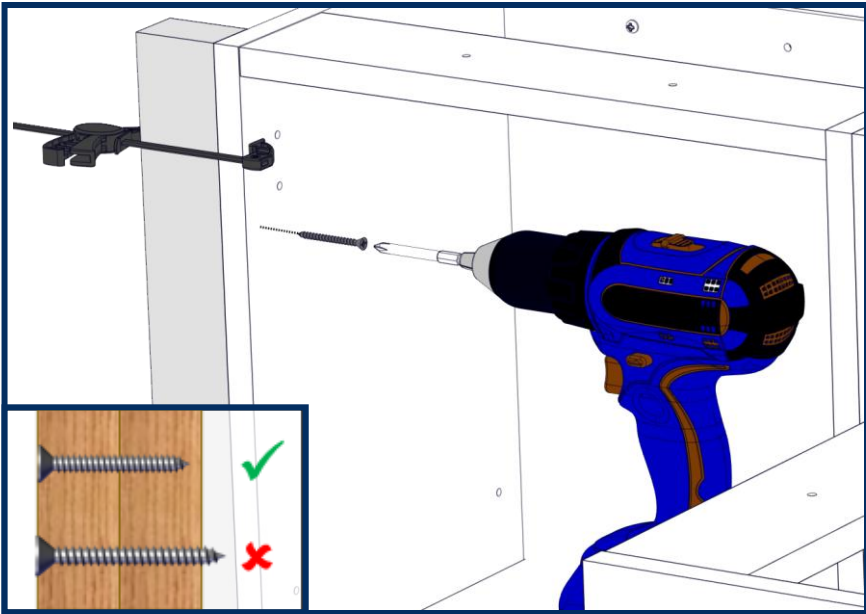






3 Counter-sink Holes

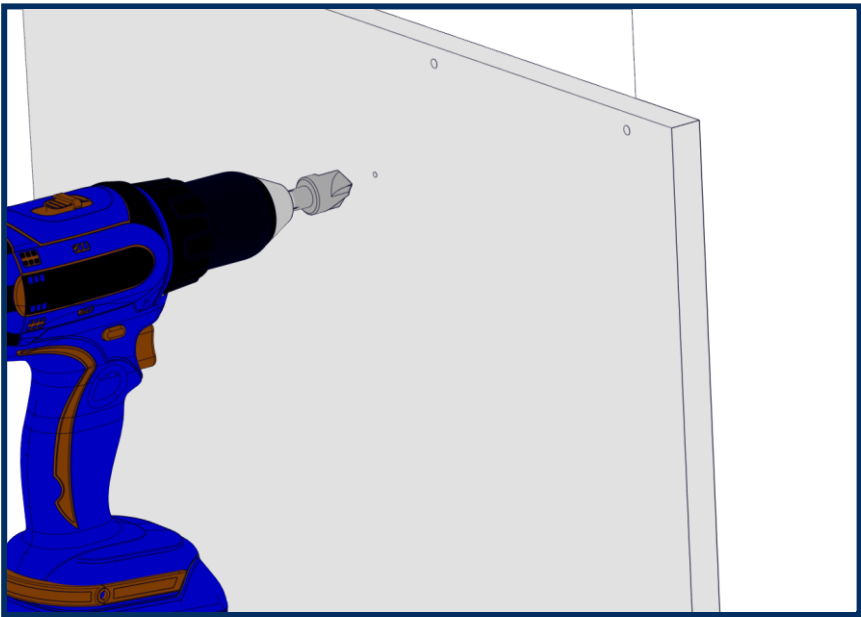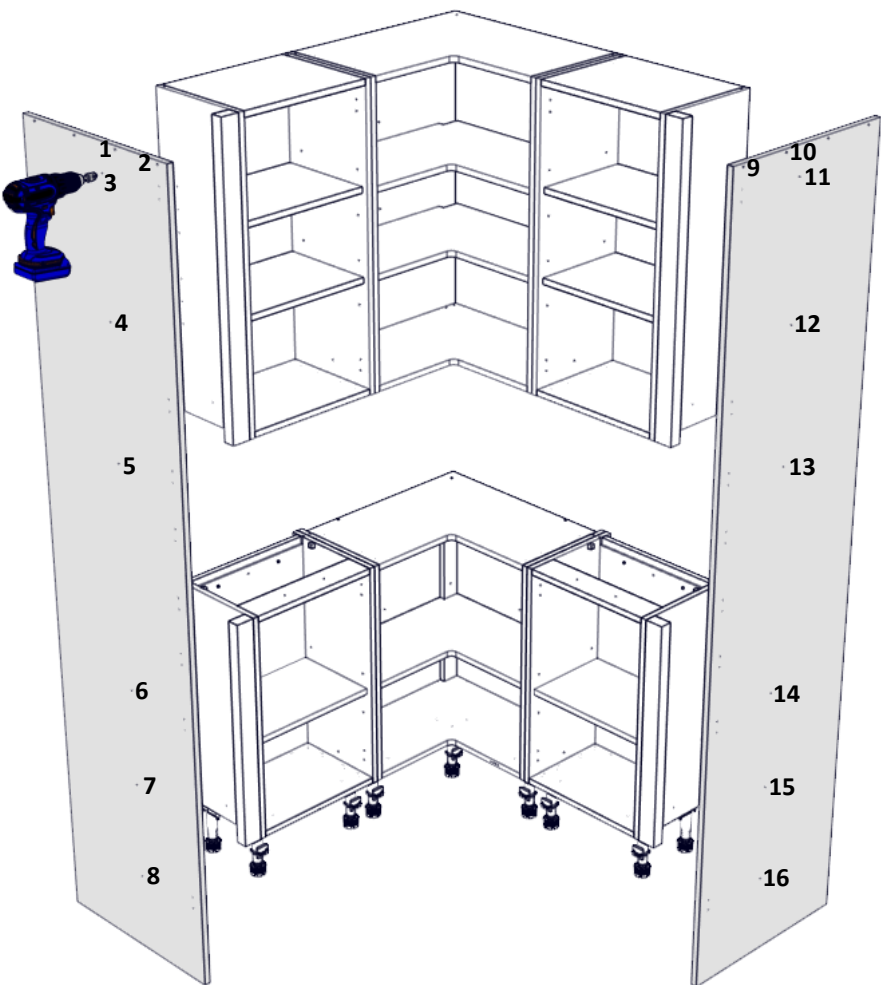



4 Attach Sides

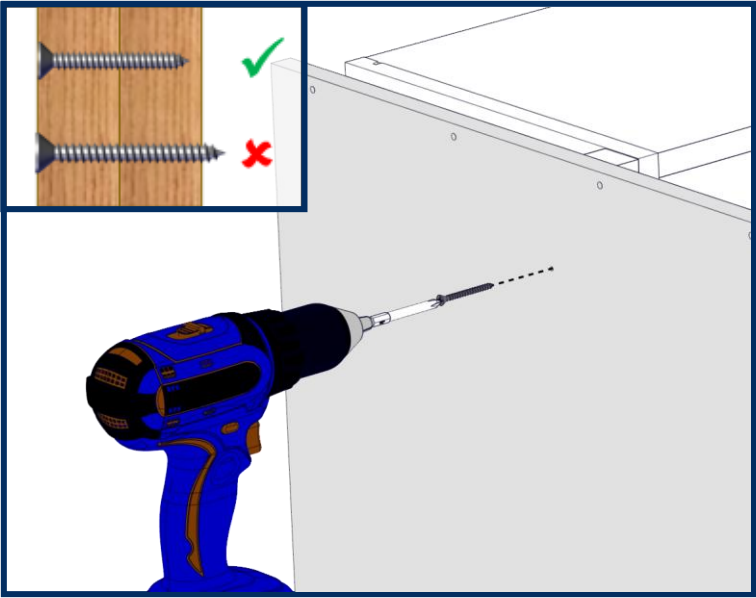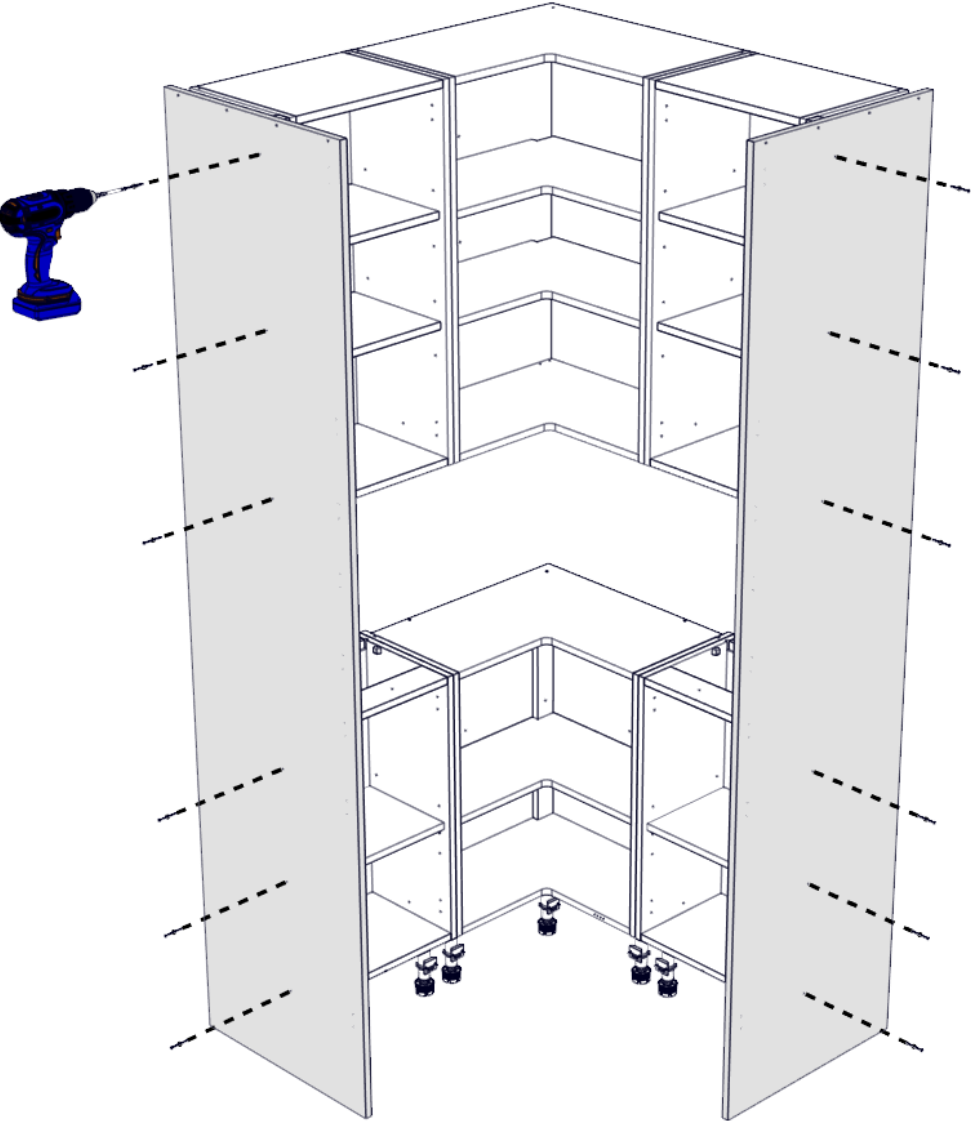




5a Attach Top

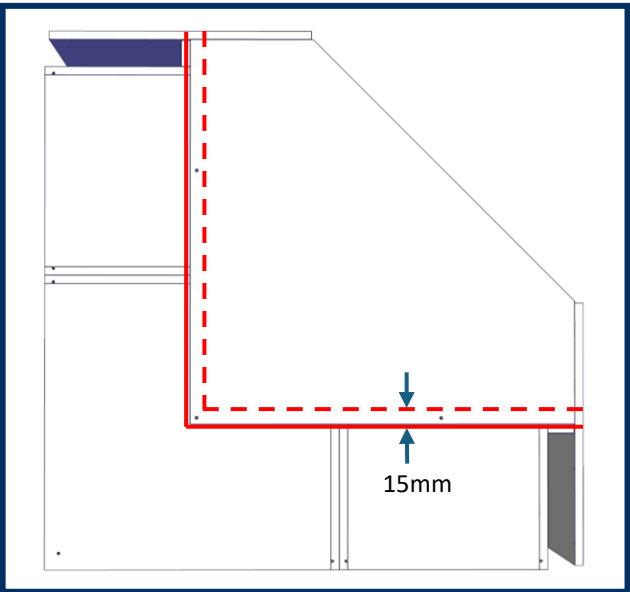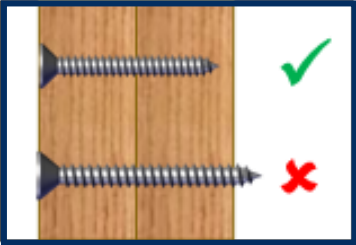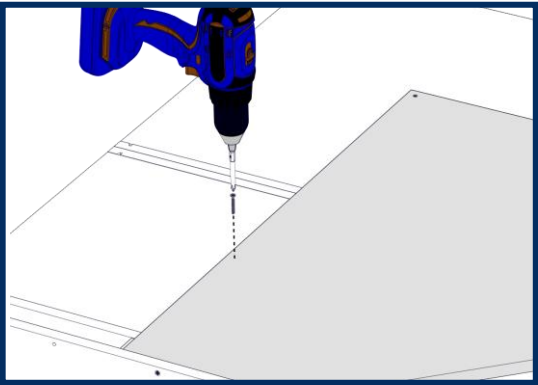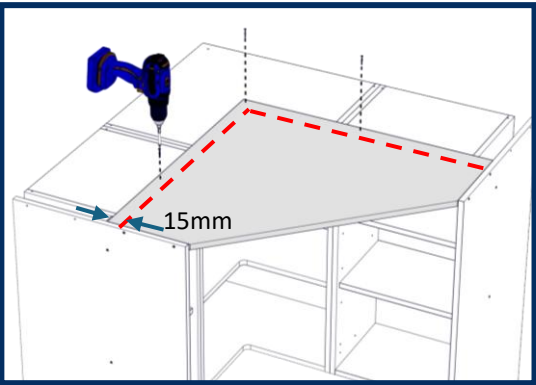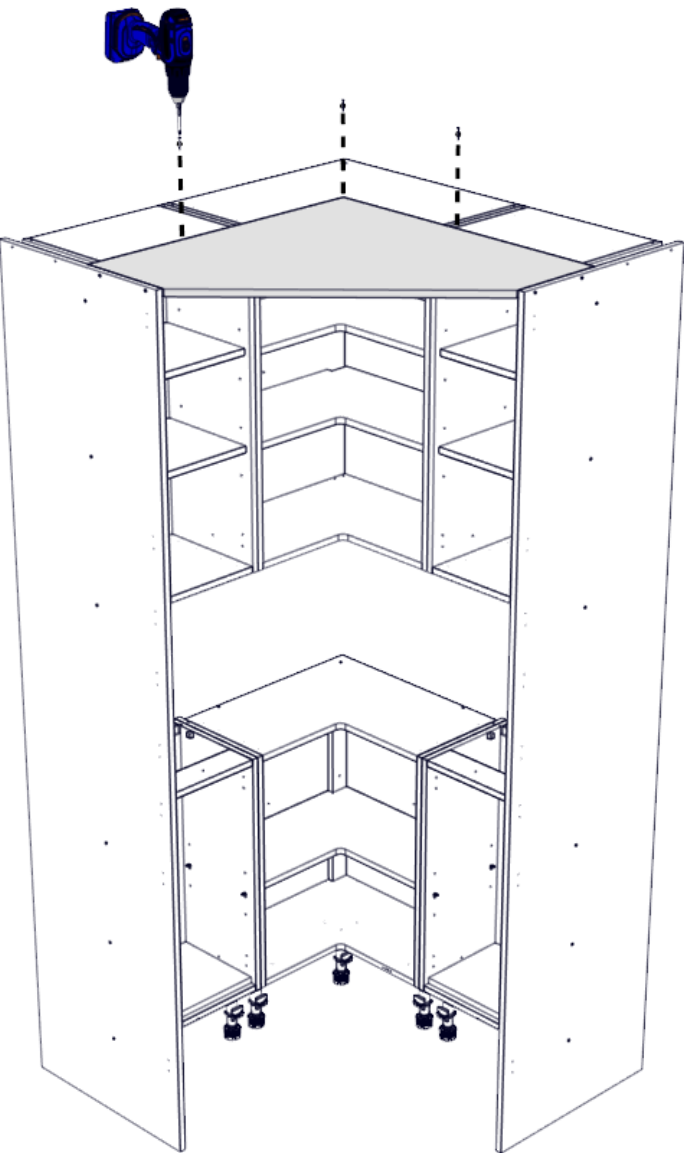



5b Attach Top

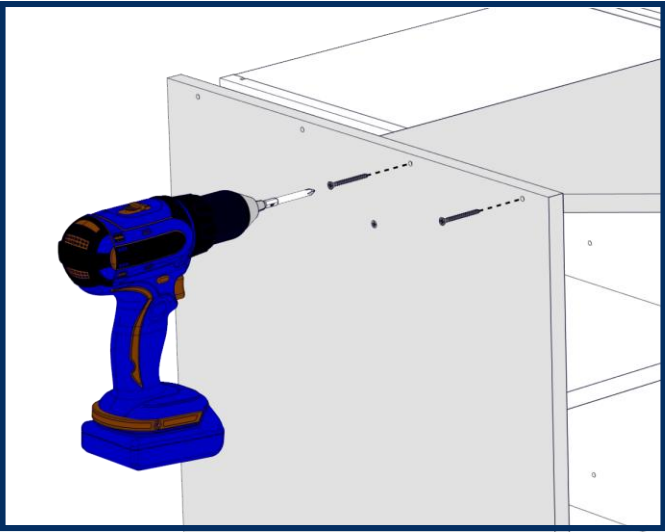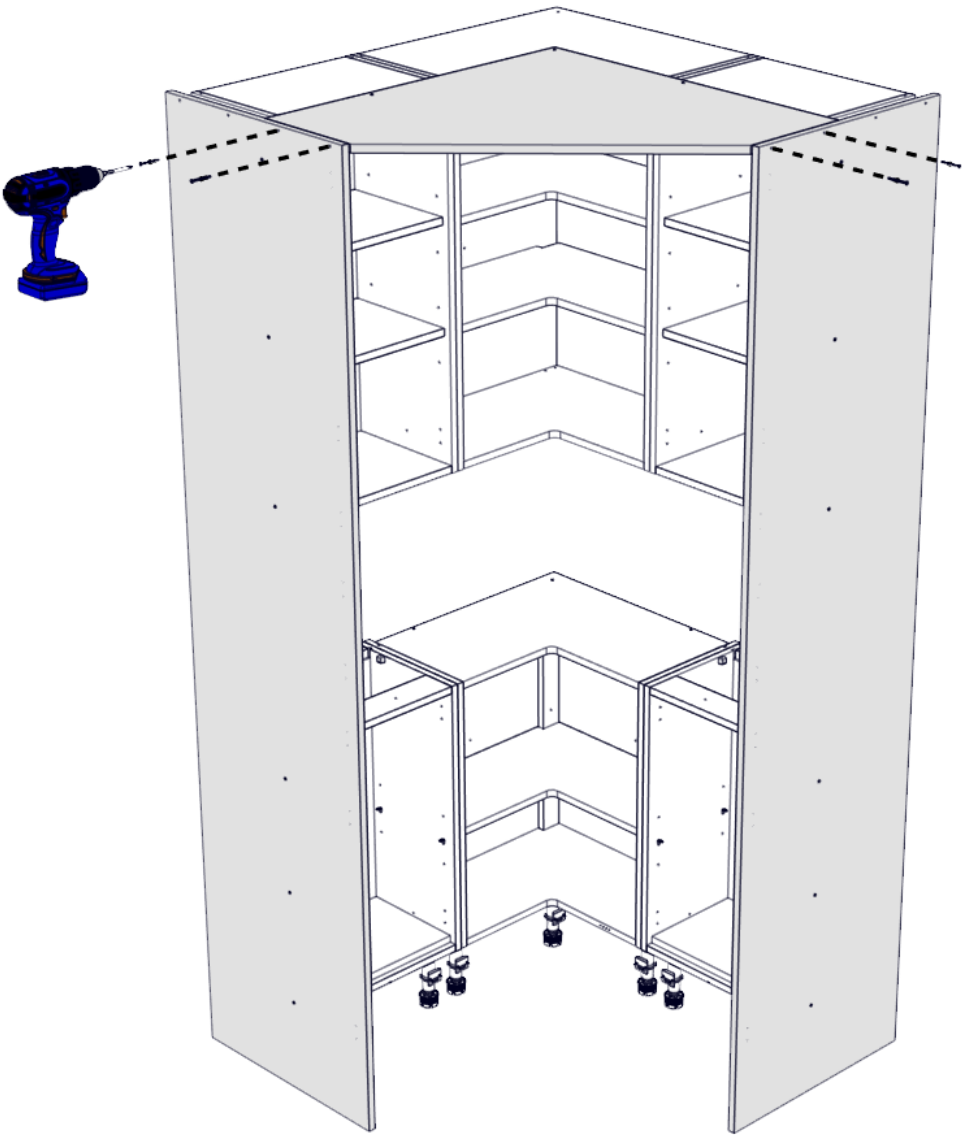





6a Fix Door Brackets

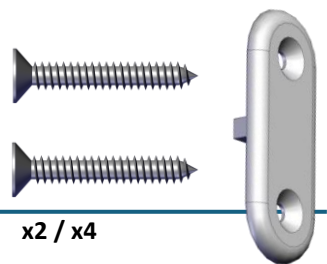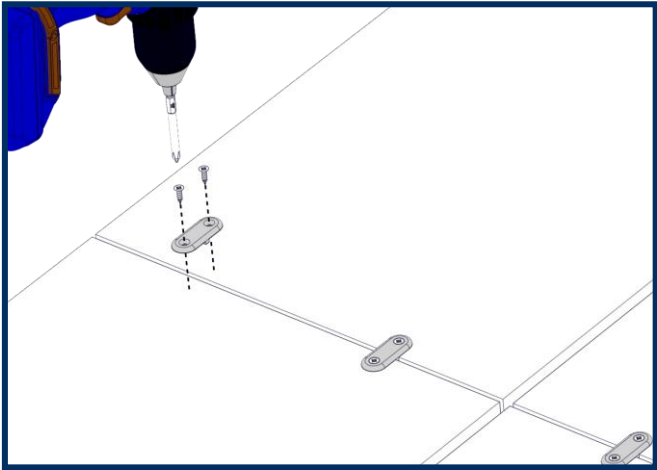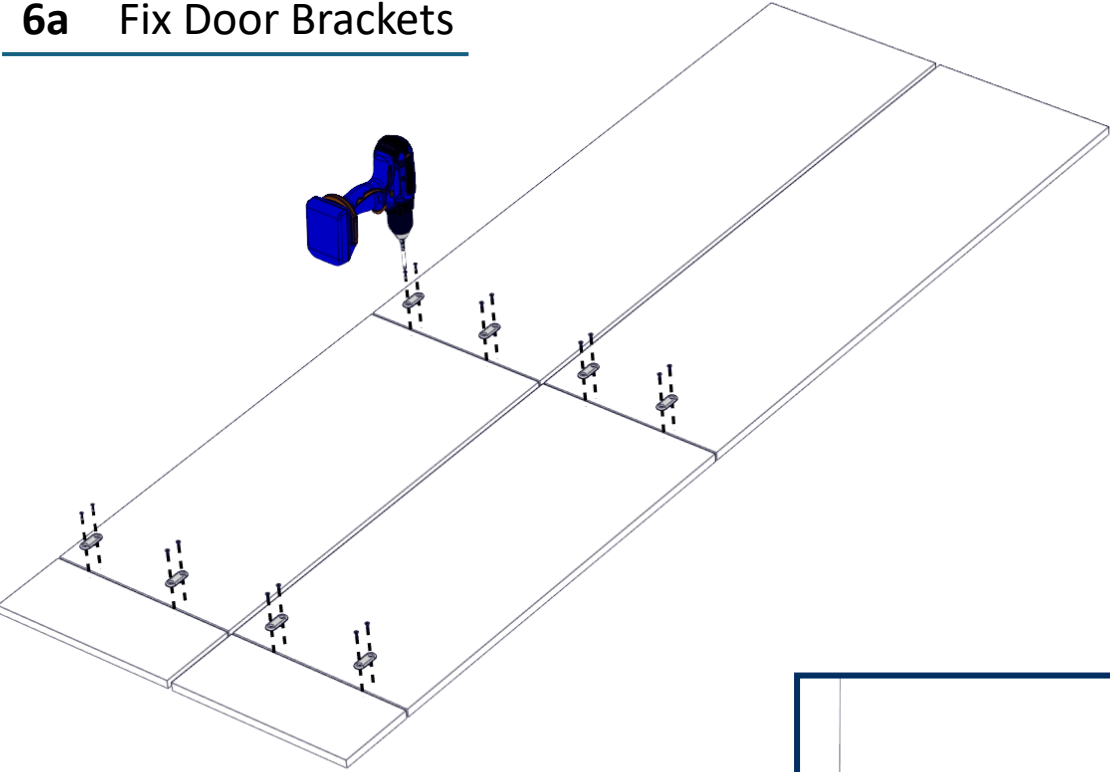






Note: For a uniform look, use the same brackets to attach the plinth.
To match the plinth of the other cabinets, please see Step. 6b.

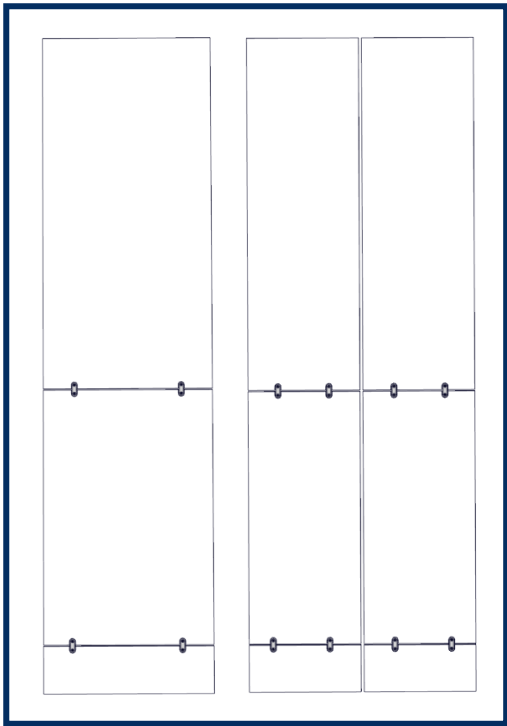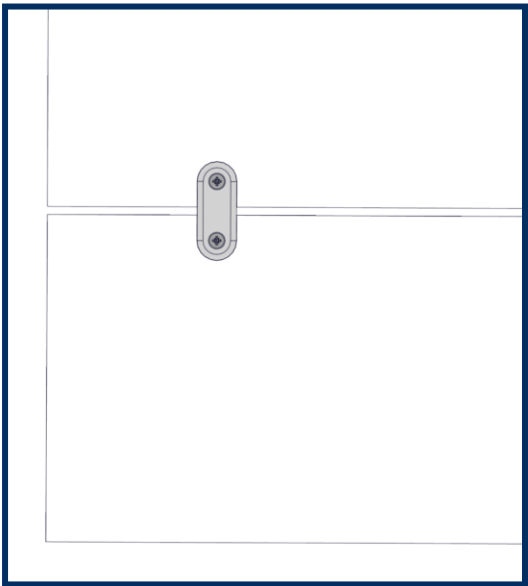

6b Fix Door Brackets

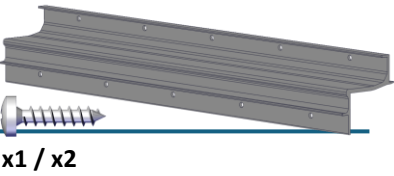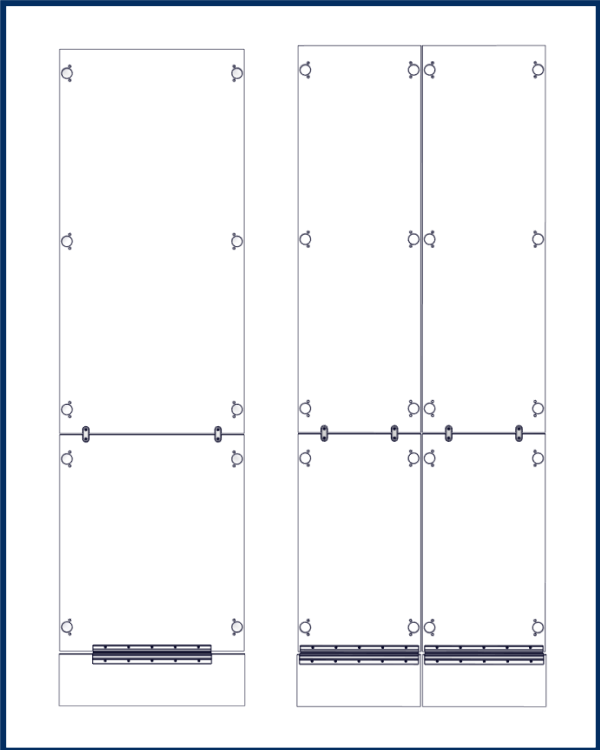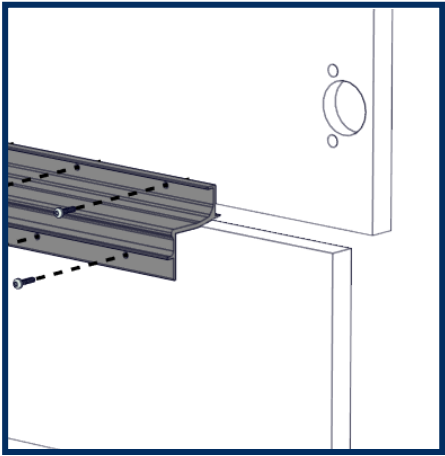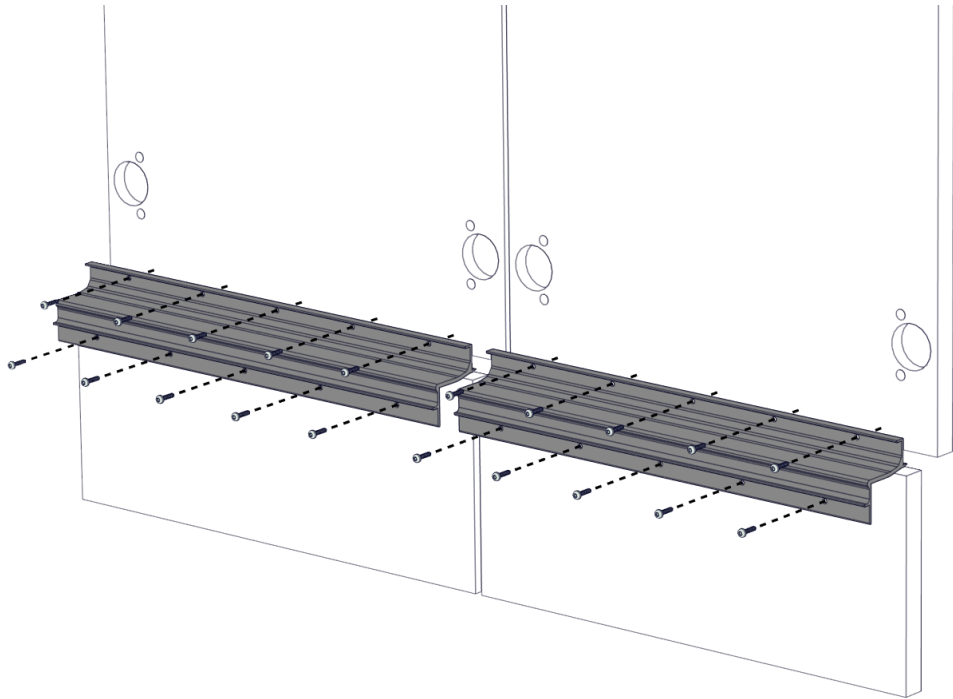

7 Door Fitting

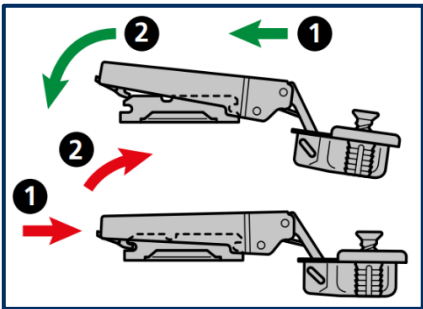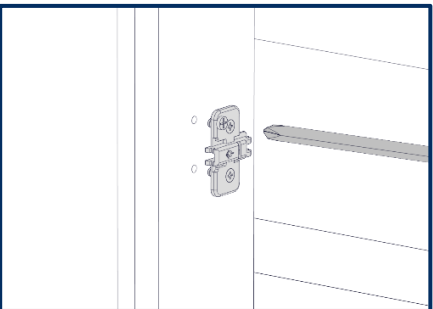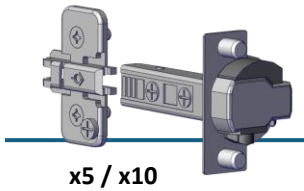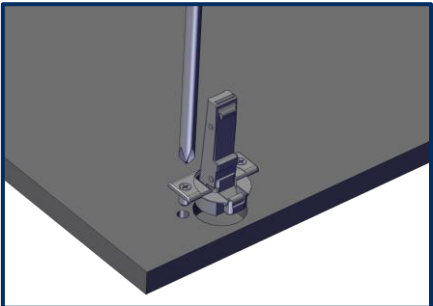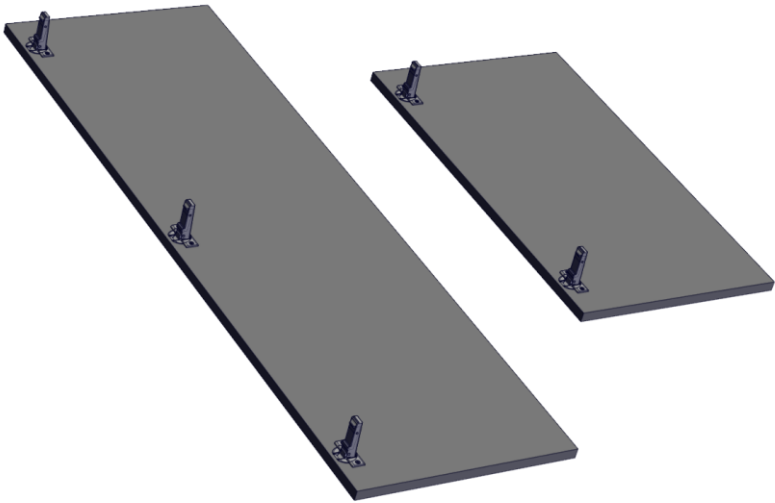

8 Door Adjustment

